

PART LIST








PARTS

NOTICE

Installation of other than genuine Kintera parts will void the warranty on this equipment.

The serial plate is located inside the front door on the left side.


Replacement parts may be ordered through an Authorized Parts Distributor. When ordering parts, please have the Model Number and Serial Number of your fryer, Part Number and Description.

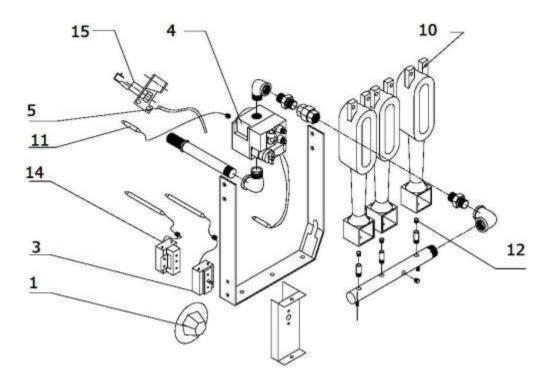

| No. | Part # | Description | F3 | F4 | F5 |
|-----|--------|---------------------------------------|----|----|----|
| 1 | 400045 | Thermostat Knob | 1 | 1 | 1 |
| 3 | 400044 | Regulating Thermostat, 200°F to 400°F | 1 | 1 | 1 |
| 4 | 400042 | Combination Gas Valve (Natural) | 1 | 1 | 1 |
| | 400146 | Combination Gas Valve (Propane | * | * | * |
| 5 | 400070 | Flexible Pilot Tubing, 1/4" | 1 | 1 | 1 |
| 10 | 300036 | Right Fryer Burner | 1 | 1 | 1 |
| | 300037 | Center Fryer Burner | 1 | 2 | 3 |
| | 300038 | Left Fryer Burner | 1 | 1 | 1 |
| 11 | 400043 | Thermopile | 1 | 1 | 1 |
| 12 | 300034 | Main Burner Orifice #39 (Natural) | 3 | 4 | 5 |
| | 300035 | Main Burner Orifice #52 (Propane) | * | * | * |
| | 300046 | Orifice Extension | 3 | 4 | 5 |
| 14 | 400046 | Safety High Limit (450°F) | 1 | 1 | 1 |
| 15 | 400047 | Pilot 3-Way (Natural) | 1 | 1 | 1 |
| | 400048 | Pilot 3-Way (Propane) | * | * | * |

KINTERA FLOOR MODEL GAS FRYERS

PARTS (CONTINUED)

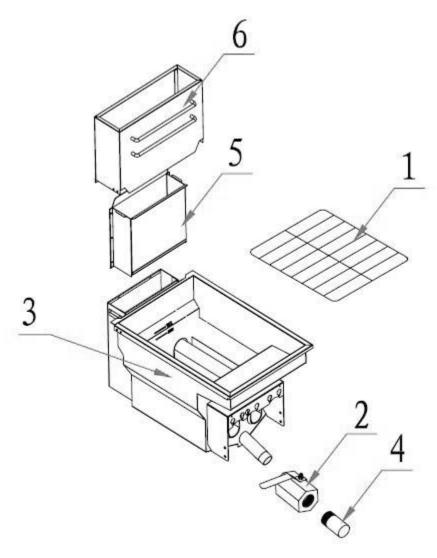

| No. | Part # | Description | F3 | F4 | F5 |
|-----|---------|---------------------------|----|----|----|
| 1 | 400037 | Basket Support | 1 | 1 | |
| | 400058 | Basket Support | | | 1 |
| 2 | 400036 | Drain Valve, (Ball Style) | 1 | 1 | 1 |
| 3 | C200016 | Fry Tank Only | 1 | | |
| | C200017 | Fry Tank Only | | 1 | |
| | C200056 | Fry Tank Only | | | 1 |
| 4 | 400071 | Drain Extension | 1 | 1 | 1 |
| 5 | 400075 | Flue Top | 1 | | |
| | 400076 | Flue Top | | 1 | |
| | 400077 | Flue Top | | | 1 |
| 6 | 400078 | Flue Wrap | 1 | 1 | |
| | 400079 | Flue Warp | | | 1 |

ENTRÉE FLOOR MODEL GAS FRYERS



| No. | Part # | Description | F3 | F4 | F5 |
|-----|----------|--|-----|-----|-----|
| 1 | 100106 | Door Assembly Complete | 1 | 1 | |
| | 100137 | Door Assembly Complete | | | 1 |
| | 300032 | Door Magnet | 1 | 1 | 1 |
| 3 | 400147 | 6" Adjustable Leg | 4 | 4 | 4 |
| | 266001-1 | Caster Kit, (2 Front Swivel w/Brake, 2 Rear Fixed) | OPT | OPT | OPT |
| 6 | 400057 | Fry Basket (13.25" L x 6.5" W x 6" D) | 2 | 2 | |
| | 400039 | Fry Basket (17.5" L x 9.25" W x 6" D) | | | 2 |
| 8 | 400072 | FLAME GUARD (OPTIONAL) | | | |
| 9 | 266863-2 | FRYER TO FRYER CONNECTOR STRIP (OPTIONAL) | 1 | 1 | |
| | 266863-3 | FRYER TO FRYER CONNECTOR STRIP (OPTIONAL) | | | 1 |
| 10 | 266211-1 | FRY TANK COVER (OPTIONAL) | 1 | 1 | |
| | 266211-2 | FRY TANK COVER (OPTIONAL) | | | 1 |